


# FRAMED COVER UNIT

## BPFE2/FRCO

2 Drum Spill Pallet with Framed Cover - 131 x 75 x 202cm

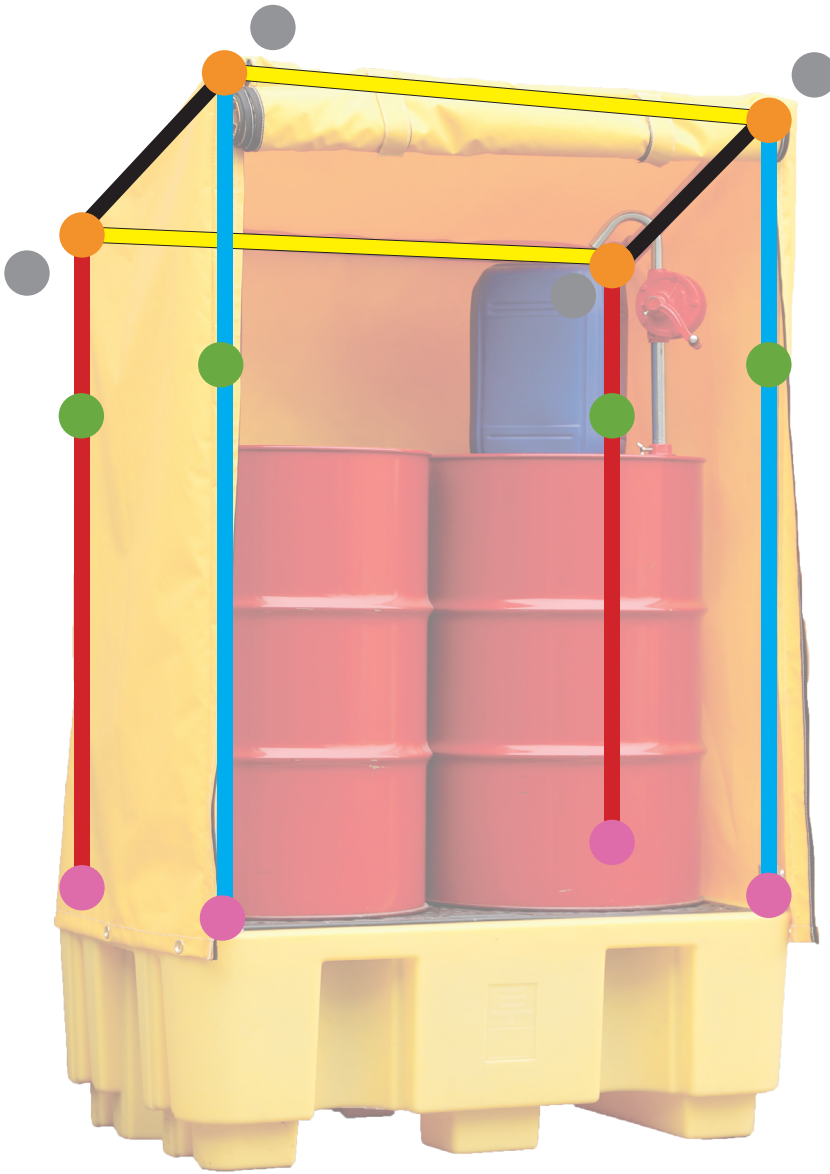

A12 FOOT



A48 CORNER SWIVEL



A2 SHORT TEE



A68 CAPS



A9 INTERNAL JOINER



### FITTINGS

PART	A12 Foot	A48 Corner Swivel	A2 Short Tee	A68 Caps	A9 Internal Joiner
QUANTITY	4	4	2	4	4

### TUBES

PART	Side Ridge Bars	Center Ridge Bar	Rear Legs	Front Legs	Front & Rear Cross Bars
QUANTITY	2 x Black 520mm	0	2 x Red 2 Band 730mm	2 x Blue 2 Band 1050mm	2 x Yellow 1000mm
QUANTITY			2 x Red 1 Band 570mm	2 x Blue 1 Band 480mm	

### ACCESSORIES

PART	10mm x 30mm Bolts	10mm x 35mm Bolts	10 x 50mm Bolts	10 Flanged Nuts	8mm Self Tapper
QUANTITY	0	8	0	8	6
PART	8mm Big Washer	2.5mm x 12mm Self Tapper	1/4 inch Allen Key	6mm Allen Key	Yellow PVC Cover
QUANTITY	6	4	1	1	1

# FRAMED COVER UNIT

## BPFE2/FRCO

2 Drum Spill Pallet with Framed Cover - 131 x 75 x 202cm

### Assembly Instructions

#### Tools required:

1. Power drill, 8mm driver socket and 4mm drill bit
2. 1/4 " Allen key
3. 17mm combination spanner
4. Ratchett with 15mm socket and 17mm socket

#### Frame mounting points (1)

- Fit the four feet to the pre-drilled corners of the base unit using 8mm x 40mm bolts and flanged lock-nuts (8 off)
- Ensure the allen key holes on the upright part of the foot face outwards and are not intruding on the space for the tube
- Replace the black decking grid(s) onto the base unit (1a)

#### Front legs (2)

- Select all **blue**-band tubes and attach the shorter to the longer with the A9 internal joint. These are the two front legs
- Place front legs into foot sockets on base unit (2a)
- Fit securely in place using 1/4" allen key
- Place corner sockets onto top of each leg

#### Back legs (3)

- Select all **red**-banded tubes and attach the shorter to the longer with the A9 internal joint. These are the back legs
- Place the red-banded tubes into the rear foot sockets of the base unit
- Fit securely in place using 1/4" allen key
- Place corner sockets onto top of legs

#### Front/rear roof tubes (4)

- Select both **yellow**-banded tubes; these are the front and rear roof tubes
- Slide t-connector onto each tube
- Fit tubes into corner sockets at top of front legs and repeat with back legs
- Secure at each end using 1/4" allen key

#### Side tubes (5)

- Select both **black**-banded tubes; these are the sloping side tubes of the roof
- Fit into corner sockets between front and back legs using 1/4" allen key

#### Cover (6)

- Place cover over frame and close all zips.
- Ensure Velcro straps are on the outside and cover sits squarely on the frame
- Drill 4mm pilot holes in side of base unit using eyelets as guides
- Secure the cover to the base unit using self-tapping screws (supplied)

#### Door (7)

- At the base of each door line up the twist fasteners to the twist fastener eyelets and secure in place using two self tapping screws

